

Update the Oven Firmware from a USB Stick

1. Access Firmware File

Scan the QR Code:



Or go to Software Firmware downloads at www.merrychef.com

2. Download the Zipped Firmware File onto a USB stick.



Zipped Firmware File

Right click on the file, select 'extract all' and follow the instructions.




Unzipped Firmware File named 'welbilt' will appear


Do not click on/open the file any further. The USB stick is now ready for upload to your oven.




3. Press the screen to start the oven.

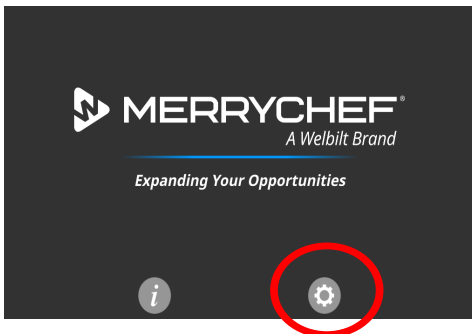

4. Press the 'SETTINGS' button when this screen is visible.

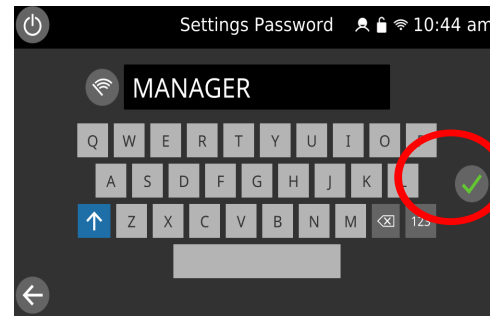


5. Type in the password 'MANAGER' & press the green tick.

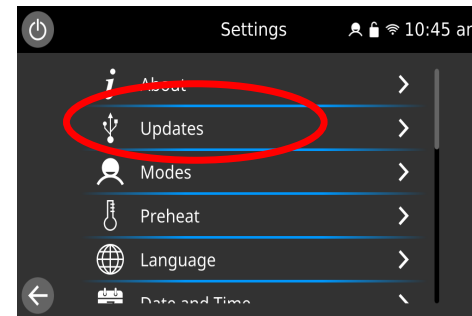


6. Press the 'UPDATES' button.




7. Insert the programmed USB stick into the data port. This is found behind the front filter door, left hand side.

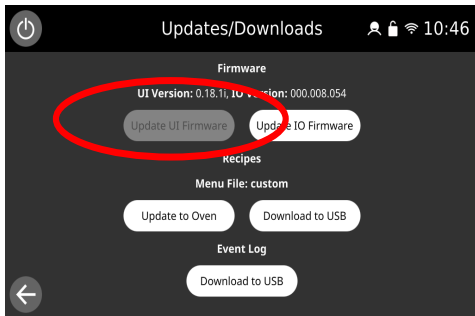


8. **WAIT** for the 'Update UI Firmware' to become enabled (turn white), this will take a few minutes.

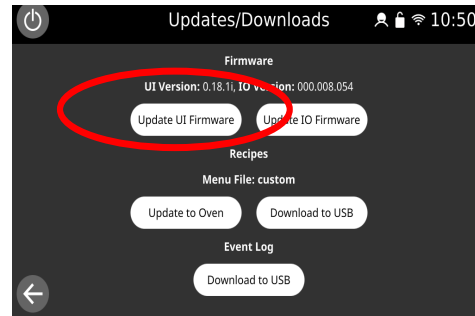


9. Press the 'Update UI Firmware' button.

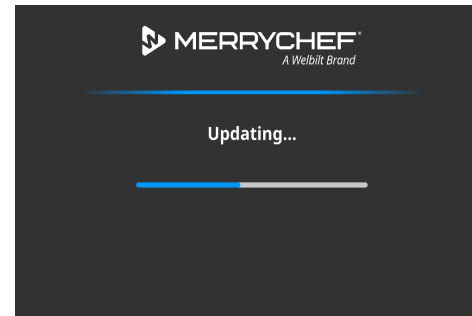


10. **WAIT** for the UI Firmware to finish updating. Do not remove the USB stick.

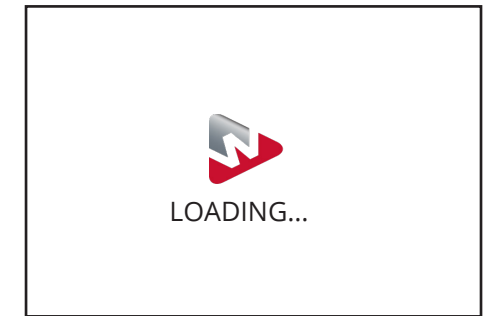


11. The oven will now reboot. This could take up to 10 minutes.

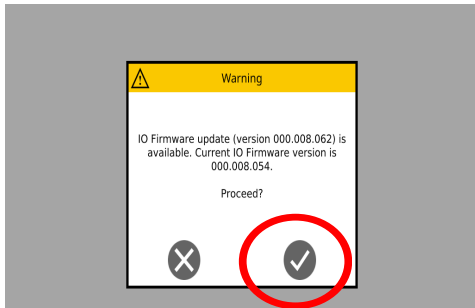

12. The oven will now automatically upload the latest version of IO Firmware.

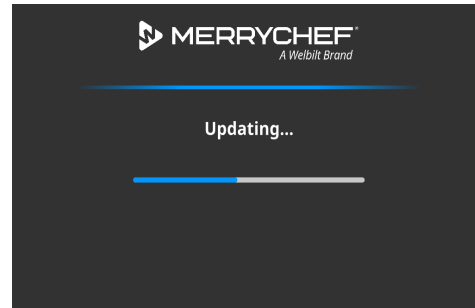

13. **WAIT** for the IO Firmware to finish updating (again, this will take a few minutes).

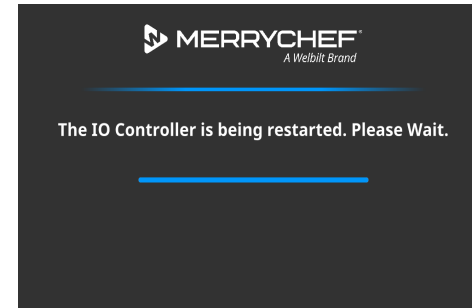

14. Do not remove the USB stick.



15. Your oven is now updated with the latest firmware



16. Remove the USB stick from the data port.



Merrychef.Welbilt



@Merrychef_W



Merrychef -
A Welbilt Brand



MERRYCHEF
A Welbilt Brand

For more information, please visit
www.merrychef.com