

## Upload a Menu to the Oven from a USB Stick

1. **Access Menu File**  
Scan the QR Code:



Or go to Software Firmware downloads at [www.merrychef.com](http://www.merrychef.com)

2. Download the Zipped Menu File onto a USB stick.



Zipped Menu File

Right click on the file, select 'extract all' and follow the instructions.




Unzipped Menu File named 'welbilt' will appear


Do not click on/open the file any further. The USB stick is now ready for upload to your oven.




3. Press the screen to start the oven. Ensure the oven is empty.

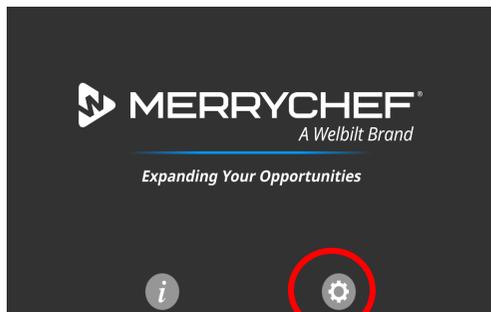

4. Press the 'SETTING' button when this screen is visible.

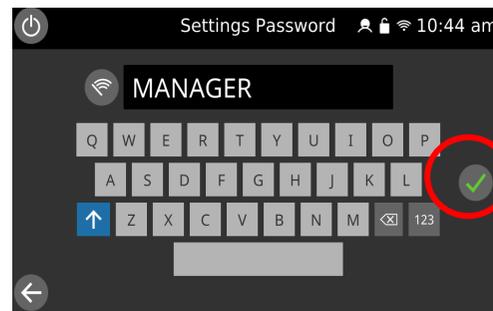

5. Type in the password 'MANAGER' & press the green tick.

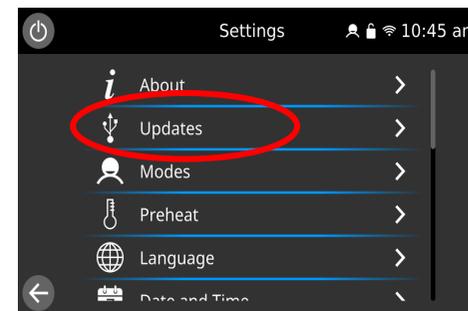


6. Press the 'UPDATES' button.



7. Insert the programmed USB into the data port. This is found behind the front filter door, left hand side.




8. Press the 'UPDATE TO OVEN' button.

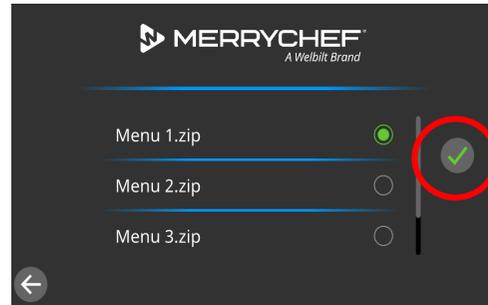

9. Select the new file required. Press the green tick to confirm.




10. Updating in progress, don't remove the USB.

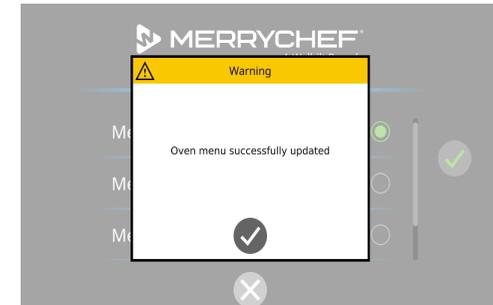


11. Update completed, press the tick.



12. Remove the USB and close the front filter cover.

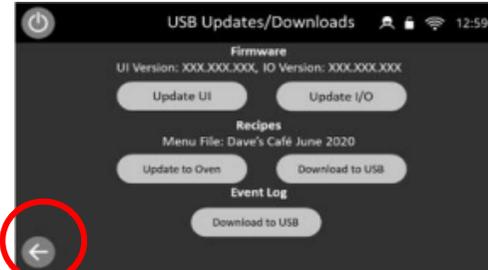


13. Press the back arrow.

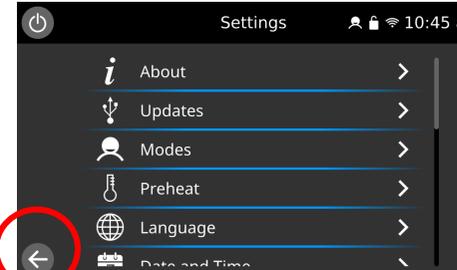


14. Press the back arrow.




15. Wait for a few seconds on this screen. If there are multiple pre-heats on the oven, go to no. 16. If there is only a single preheat, go to no. 17.

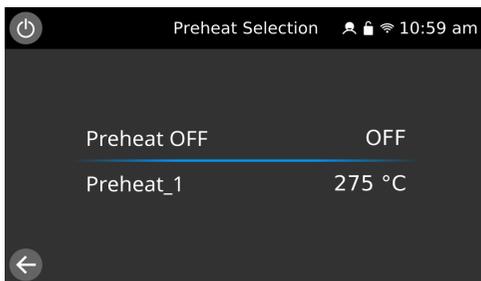

16. Select the correct cooking temperature.

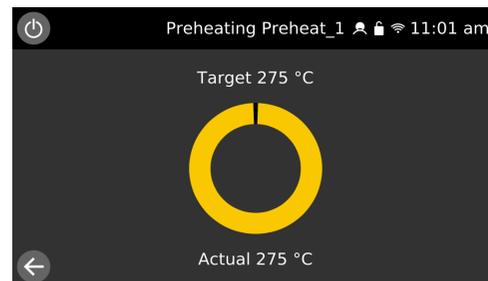

17. The oven will preheat to the correct temperature and will be ready to use with your new programs on.

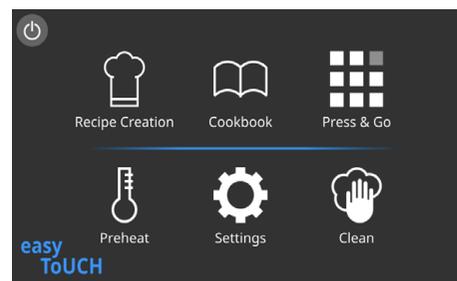

18. The oven is ready to use with your new programs on.



Merrychef.Welbilt



@Merrychef\_W



Merrychef - A Welbilt Brand



For more information, please visit [www.merrychef.com](http://www.merrychef.com)